



Diagrams of different alternatives for the zero position of a scale

Alt. I

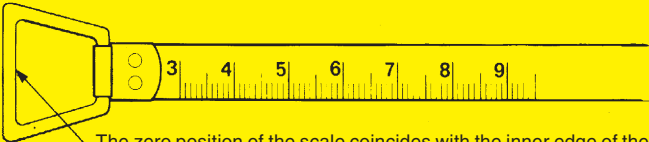


The zero position of the scale coincides with the inner edge of the hook.

Alt. II

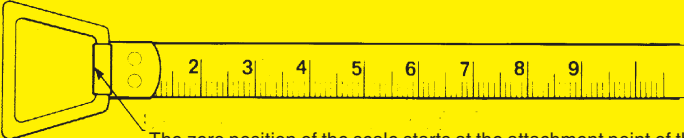

The zero position of the scale starts at the attachment point of the hook.

Alt. III

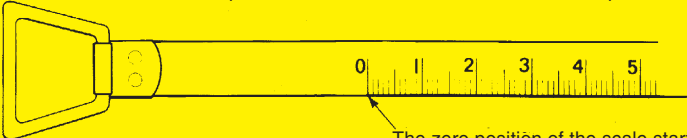


The zero position of the scale starts at a point on the tape.

Alt. IV



Flexible hook. The zero position of the scale coincides with the inner edge of the hook (external measuring), or outer edge of the hook (internal measuring).

Alt. V

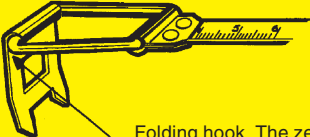

Folding hook. The zero position of the scale coincides with the inner edge of the hook.